

Fast, Easy, Visual

It is easy to play with SuperCoach

All you need to do:

1. Turn on the Main Switch of the SuperCoach.



2. Select the **LEVEL** of playing on the Control Panel by pushing the **UP** and **DOWN** arrows. Observe the display changing.



3. Push **Recall**



4. Select a Program by pushing one of the black dots labeled **Pr1- Pr10**.



5. Now you can begin to play by pushing the **PLAY** button. Your program will run until you push **STOP** on the control panel or on the remote control.



Simple Steps to Programm SuperCoach

All you need to do:

1. Push the **ENTER STROKES** button once.



2. Select one of the ball types. In this case we are selecting **FLAT**.



3. Push the black dot **where you want the ball to land** on the half court simulation. Unless you want to change ball type, continue selecting new locations.



4. If you want to select another ball type, go back to the left and push the desired button. In this case we select a **SLICED** stroke.



5. Select the ball impact location. Continue this until you want to select another type of ball.



6. You can continue this until up to 30 strokes, but you can stop at any time.



8. Push the **STOP** button to end programming.



9. Select the **LEVEL** you want to play on.



10. Now you can begin to play by pushing the **PLAY** button. Your program will run until you push **STOP** on the control panel or on the remote control.



11. If you loved this program, you can save it by pressing the **SAVE** button and selecting one of the 28 program locations **Pr1-Pr28**.



Enjoy your SuperCoach, your tireless partner and coach.